



TEMPÉRATURE



Laissez tempérer la murale 48h avant l'installation, dans la pièce où elle sera installée, en retirant tout emballage.

Tout produit adhésif est toujours très sensible aux variations de température (chaud/froid) et d'humidité.

Pendant et après l'installation, conservez une température stable pendant 2 semaines. (Entre 18°C à 22°C avec une humidité relative de 30 à 50%.)

SURFACE


INSTALLER VOTRE
MURALE SUR
CE TYPE DE MUR
N'ASSURERAS PAS
UNE BONNE ADHÉRENCE.
VOTRE GARANTIE
SERA RÉVILIÉE...



Mur frais peint depuis moins de 2 semaines
Mur irrégulier (non lisse), avec défauts ou avec du stucco
Mur avec seulement un apprêt (primer)
Mur avec surface de plâtre non peinturé
Mur avec vieille peinture qui s'écaille
Mur avec traces de fumée (cuisson/cigarette/vapotage)
Mur avec une tapisserie
Mur en vrai bois ou en béton
Mur avec poussières ou saletés (Utilisez du nettoyeur TSP)
Mur humide (laissez sécher avant installation)

INSTALLATION



Retirez environ 2-3 pouces de la partie supérieure de la protection (papier ciré) à l'endos de la murale. Alignez le panneau avec votre mur et votre plafond (vous pouvez, à cette étape, encore repositionner votre panneau, évitez d'étirer). Allouez un extra de 1/2" en hauteur pour ajuster avec votre plafond sur sa longueur. Un plafond est toujours inégal. Croyez-nous!

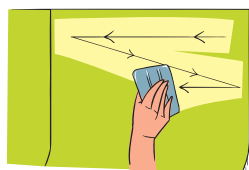

Retirez la protection (papier ciré) de la murale de quelques pouces à la fois afin d'éviter de faire des bulles en raclant de gauche à droite. Lorsque des bulles se forment, décollez délicatement cette partie et continuez avec la raclette.



Répétez avec les autres sections de la murale en chevauchant les panneaux. Un chevauchement de 1/4" à 3/4" est prévu, ajustez l'image sur le panneau précédent. Utilisez un couteau de type "x-acto" pour la coupe de finition.

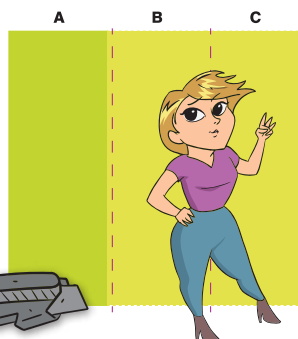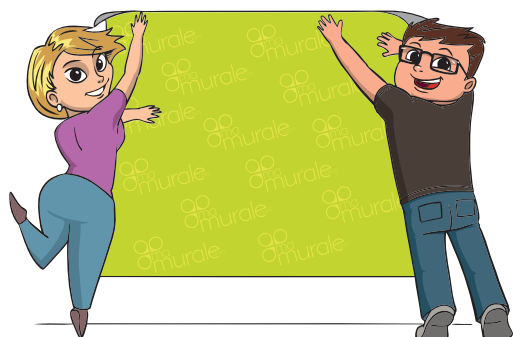

C'EST FAIT!

Surveillez votre murale pour tout décollement dans les prochains jours. Ne paniquez pas, c'est possible! Il vous suffit d'utiliser une "colle en aérosol" disponible dans toute quincaillerie, afin de maintenir les coins et replis de votre murale en place.

Communiquez avec nous pour toute question!



3M SUPER 77
77-CCVOC30-EF
CANAC 12.995



KRYLON
48010
CANAC 7.295



TEMPERATURE



Let the wall mural temper 48 hours before the installation in the room where it will be installed. Remove it from all its packaging.

Any adhesive product is always very sensitive to temperature (hot/cold) and humidity variations.

After the installation, keep a stable temperature for 2 weeks. 18°C to 22°C with a relative humidity of 30 to 50%.

SURFACE

INSTALLING YOUR
WALL MURAL ON
THIS TYPE OF SURFACE
WILL NOT ENSURE
A GOOD ADHERENCE.
YOUR GUARANTEE WILL
BE CANCELED...



Wall freshly paint since less than 2 weeks

Rough wall (non smooth, irregular), or with stucco

Wall painted with only a primer coat

Wall with unpainted plaster surface

Wall with old peeling paint

Wall with smudge of smoke (cooking/cigarette/vaping)

Wall with a wallpaper


Wall in real wood or in concrete

Wall with dust or dirt (use TSP cleanser)


Wet wall (let it dry before installation)

INSTALLATION



Peel off around 2-3 inches of the backing of the wall mural from the top part. Align the panel with your wall and ceiling (you can, at this stage, still reposition your panel, avoid stretching). Keep an extra of 1/2" of the height to adjust with your ceiling over its length. A ceiling is always uneven. Trust us!

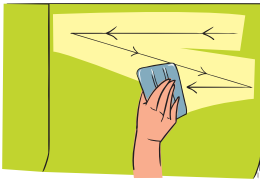

Remove the backing of the wall mural a few inches at a time to avoid bubbles by scraping from left to right. When bubbles appears, carefully peel off this part and continue with the squeegee.

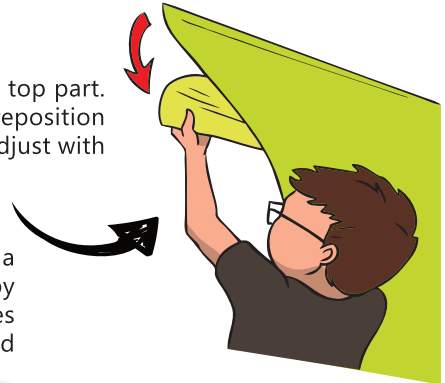

Repeat these steps with the other section(s) of the wall mural by overlapping the panels. A 1/4" to 3/4" overlap is provided, you'll see the image will continue on both panels. Use a "x-acto" knife for the finishing cut.

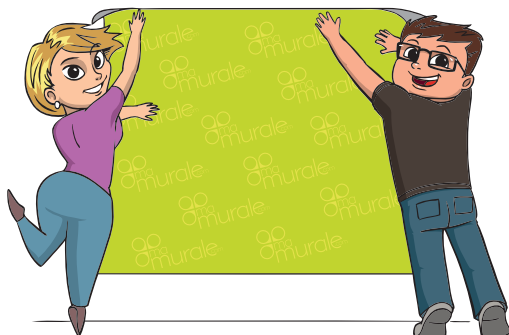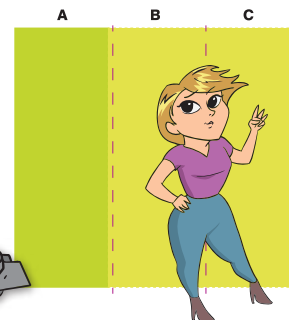

DONE!

Keep an eye on your wall mural for any peeling off in the next few days. Do not stress, it's possible! Simply use spray adhesive to keep the corners in place, available at any hardware store.

Contact us for any questions!



3M SUPER 77
77-CCVOC30-EF
CANAC 12.995



KRYLON
48010
CANAC 7.295